

# Ultra 485.0PT022

User Manual | 7105-DB9



SEALEVEL®

# Contents

**CONTENTS ..... 2**

**INTRODUCTION ..... 3**

**BEFORE YOU GET STARTED ..... 4**

**CARD SETUP ..... 5**

**SEACOM SOFTWARE INSTALLATION ..... 9**

**HARDWARE INSTALLATION ..... 10**

**TECHNICAL DESCRIPTION ..... 11**

**SPECIFICATIONS ..... 12**

**APPENDIX A – TROUBLESHOOTING ..... 13**

**APPENDIX B – HOW TO GET ASSISTANCE ..... 14**

**APPENDIX C – ELECTRICAL INTERFACES ..... 15**

**APPENDIX D – ASYNCHRONOUS COMMUNICATIONS ..... 16**

**APPENDIX E – SILK SCREEN ..... 17**

**APPENDIX F – COMPLIANCE NOTICES ..... 18**

**WARRANTY ..... 19**

# Introduction

## Overview

The PCI bus 7105-DB9 is designed with a DB9 connector compatible with the AC24AT and AC422AT Opto-22 ISA bus cards. This allows Optomux devices to be controlled from PCs that do not have an ISA bus expansion slot available. The 7105-DB9 provides a single field selectable port configurable as RS-422/485 supporting asynchronous data rates up to 460.8K bps.

Choose the RS-422 mode for long distance device connections up to 4000ft. where noise immunity and high data integrity are essential. Select RS-485 and capture data from multiple peripherals in a RS-485 multi-drop network. Up to 31 RS-485 devices can be connected to each port to automate your data collection.

In RS-485 mode, our special auto-enable feature allows the RS-485 ports to be viewed by the operating system as a COM: port. This allows the standard COM: driver to be utilized for RS-485 communications. Our on-board hardware automatically handles the RS-485 driver enable.

# Before You Get Started

## What's Included

The **ULTRA 485.OPT022** is shipped with the following items. If any of these items is missing or damaged, contact the supplier.

- **ULTRA 485.OPT022** Serial I/O Adapter

## Advisory Conventions



### Warning

The highest level of importance used to stress a condition where damage could result to the product, or the user could suffer serious injury.



### Important

The middle level of importance used to highlight information that might not seem obvious or a situation that could cause the product to fail.



### Note

The lowest level of importance used to provide background information, additional tips, or other non-critical facts that will not affect the use of the product.

# Card Setup

## RS-485 Enable Modes

RS-485 is ideal for multi-drop or network environments. RS-485 requires a tri-state driver that will allow the electrical presence of the driver to be removed from the line. The driver is in a tri-state or high impedance condition when this occurs. Only one driver may be active at a time and the other driver(s) must be tri-stated. The output modem control signal Request To Send (RTS) is typically used to control the state of the driver. Some communication software packages refer to RS-485 as RTS enable or RTS block mode transfer.

One of the unique features of the **ULTRA 485.OPTO22** is the ability to be RS-485 compatible without the need for special software or drivers. This ability is especially useful in environments where the lower level I/O control is abstracted from the application program. This ability means that the user can effectively use the **ULTRA 485.OPTO22** in an RS-485 application with existing (i.e., standard RS-232) software drivers.

Switch SW2 is used to control the RS-485 mode functions for the driver circuit. The selections are:

**'Auto'** enable (silk-screen 'AT'). The 'Auto' enable feature automatically enables/disables the RS-485 interface via on board circuitry.

**'RTS'** enable (silk-screen 'RT') The 'RTS' mode uses the 'RTS' modem control signal to enable the RS-485 interface and provides backward compatibility with existing software products.

**'No Echo'** (silk-screen 'NE') is used to control the RS-485 enable/disable functions for the receiver based on the state of the RS-422/485 transmitter. The RS-485 'Echo' is the result of connecting the receiver inputs to the transmitter outputs. Every time a character is transmitted; it is also received. This can be beneficial if the software can handle echoing (i.e., using received characters to throttle the transmitter) or it can confuse the system if the software does not. To select the 'No Echo' mode select silk-screen position 'NE'.

## Clock Modes

The **ULTRA 485.OPTO22** employs a unique clocking option that allows the end user to select from divide by 4 and divide by 1 clocking modes. SW2 positions 1 and 2 select the Divide by 1 (silk-screen D1) and divide by 4 (silk-screen D4) modes.

To select the Baud rates commonly associated with COM: ports (i.e., 2400, 4800, 9600, 19.2, ... 115.2K Bps), set switch SW2 in the divide by 4 mode (silk-screen D4).

To select data rates up to the maximum of 460.8K bps, set switch SW2 in the divide by 1 (silk-screen D1) position. Please refer to the following page for these additional data rates.



Do not set both switches on or invalid clocking will occur.

# CARD SETUP, CONTINUED

## RS-485 Mode and Clock Mode Examples (Switch SW2)

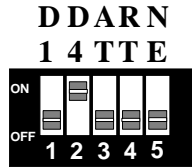


Figure 1- Switch SW2, RS-422, Divide by 4

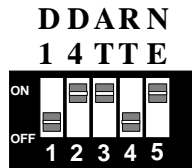


Figure 2 – Switch SW2, RS-485 'Auto' Enabled, with 'No Echo' Divide by 4

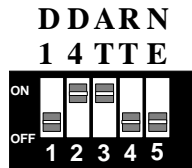


Figure 3 - Switch SW2, RS-485 'Auto' Enabled, with 'Echo' Divide by 4

## CARD SETUP, CONTINUED

### Baud Rates and Divisors for the 'Div1' mode

The following table shows some common data rates and the rates you should choose to achieve them if using the adapter in the 'Div1' mode. Windows 95/98/ME/2000/NT/XP defaults the oscillator value to 1.8432 MHz (Div4). This is suitable for traditional serial communication needs and provides for a maximum data rate of 115.2 Kbps. The oscillator value 7.3728 MHz (Div1) may be entered into either the 'Advanced Tab' on 95/98/Me/2000/XP Device Manager applet or in the 'Advanced Ports' applet in the NT Control Panel. This will allow easy selection of typical baud rates up to the maximum data rate of 460.8Kbps.

| For this Data Rate | Choose this Data Rate |
|--------------------|-----------------------|
| 1200 bps           | 300 bps               |
| 2400 bps           | 600 bps               |
| 4800 bps           | 1200 bps              |
| 9600 bps           | 2400 bps              |
| 19.2K bps          | 4800 bps              |
| 57.6 K bps         | 14.4K bps             |
| 115.2 K bps        | 28.8K bps             |
| 230.4K bps         | 57.6 K bps            |
| 460.8K bps         | 115.2 K bps           |

If your communications package allows the use of Baud rate divisors, choose the appropriate divisor from the following table:

| For this Data Rate | Choose this Divisor |
|--------------------|---------------------|
| 1200 bps           | 384                 |
| 2400 bps           | 192                 |
| 4800 bps           | 96                  |
| 9600 bps           | 48                  |
| 19.2K bps          | 24                  |
| 38.4K bps          | 12                  |
| 57.6K bps          | 8                   |
| 115.2K bps         | 4                   |
| 230.4K bps         | 2                   |
| 460.8K bps         | 1                   |

## CARD SETUP, CONTINUED

### Address and IRQ selection

The **ULTRA 485.OPTO22** is automatically assigned resources by your motherboard BIOS and or the operating system.

Adding or removing other hardware or moving the adapter to a different PCI slot may change the assignment of I/O addresses and IRQs.

### Line Termination

Typically, each end of the RS-485 bus must have line-terminating resistors (RS-422 terminates at the receive end only). A 120-ohm resistor is across each RS-422/485 input in addition to a 1K-ohm pull-up/pull-down combination that biases the receiver inputs. Switch SW1 allows customization of this interface to specific requirements. Each switch position corresponds to a specific portion of the interface. If multiple ULTRA 485.OPTO22 adapters are configured in an RS-485 network, only the boards on each end should have switches T, P & P ON. Refer to the following table for each position's operation:

| Name | Function   |
|------|--|
| T    | Adds or removes the 120 ohm termination.   |
| P    | Adds or removes the 1K ohm pull-down resistor in the RS-422/RS-485 receiver circuit (Receive data only). |
| P    | Adds or removes the 1K ohm pull-up resistor in the RS-422/RS-485 receiver circuit (Receive data only).   |
| L    | Connects the TX+ to RX+ for RS-485 two-wire operation.   |
| L    | Connects the TX- to RX- for RS-485 two-wire operation.   |

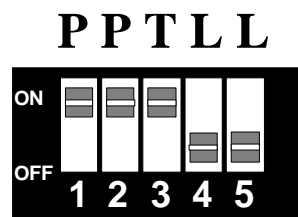


Figure 4 - Switch SW1, Line Termination



# SeaCOM Software Installation

Windows 98/ME/2000/XP/Vista™ Operating Systems

## Operating System Installation

### For Windows Users

Begin by locating, selecting, and installing the SeaCOM software from the [Sealevel software driver database](#).

SeaCOM software can also be downloaded from the 7105-DB9-product webpage: [Ultra 485.Opto22](#)

### Other Operating Systems

Refer to the appropriate section of the Serial Utilities Software.

## LINUX INSTALLATION

Refer to [Linux Archives - Sealevel](#). This link contains valuable information on installing your serial adapter in the various Linux releases. Also included is a series of files explaining proper Linux syntax and typical Linux serial implementations. The SeaCOM for Linux v7.3.2 can be downloaded from Sealevel's website ([Software: SeaCOM - Linux - Sealevel](#)).

For additional software support, please call Sealevel Systems' Technical Support, (864) 843-4343. Our technical support is free and available from 8:00AM-5PM Eastern Time, Monday through Friday. For email support contact: <mailto:support@sealevel.com>.



To install Sealevel Systems software, you must log in as an administrator or have administrator privileges in Windows.

# Hardware Installation

The adapter can be installed in any 5V PCI expansion slot.



Do not install the Adapter in the machine until the software has been fully installed.

1. **Turn off PC power. Disconnect the power cord.**
2. Remove the PC case cover.
3. Locate an available 5V PCI slot and remove the blank metal slot cover.
4. Gently insert the PCI adapter into the slot. Make sure that the adapter is seated properly.
5. After the adapter has been installed, the cables should be routed thru the opening in the bracket. This bracket also features a strain relief function that should be used to prevent unexpected cable removal.
6. Replace the screw you removed for the blank and use it to secure the adapter into the slot. (This is required to ensure FCC Part 15 compliance.)
7. Replace the cover.
8. Connect the power cord

Installation is finished.

# Technical Description

The Sealevel Systems **ULTRA 485.OPT022** provides an additional asynchronous serial port, field selectable as RS-422/485 for industrial automation and control applications.

The **ULTRA 485.OPT022** utilizes the EXAR 16C850 UART. This chip features programmable baud rates, data format, interrupt control and industry leading 128-byte FIFOs.

## Connector Assignments

### RS-422/485 Pin Assignments

| Signal |      | Name                     | Pin # | Mode   |
|--------|------|--------------------------|-------|--------|
| GND    |      | Ground                   | 3     |        |
| RDB    | RX+  | Receive Positive         | 8     | Input  |
| RDA    | RX-  | Receive Negative         | 9     | Input  |
| CTSB   | CTS+ | Clear To Send Positive   | 6     | Input  |
| CTSA   | CTS- | Clear To Send Negative   | 7     | Input  |
| TDB    | TX+  | Transmit Positive        | 4     | Output |
| TDA    | TX-  | Transmit Negative        | 5     | Output |
| RTSB   | RTS+ | Request To Send Positive | 1     | Output |
| RTSA   | RTS- | Request To Send Negative | 2     | Output |

# Specifications

## Environmental Specifications

| Specification     | Operating                     | Storage                       |
|-------------------|-------------------------------|-------------------------------|
| Temperature Range | 0° to 70° C (32° to 122°F)    | -20° to 70° C (-4° to 158° F) |
| Humidity Range    | 10 to 90% R.H. Non-Condensing | 10 to 90% R.H. Non-Condensing |

## Manufacturing

All Sealevel Systems Printed Circuit boards are built to U. L. 94V0 rating and are 100% electrically tested. These printed circuit boards are solder mask over bare copper or solder mask over tin nickel.

## Power Requirements

|             |        |
|-------------|--------|
| Supply Line | +5 VDC |
| Rating      | 325 mA |

## Physical Dimensions

|                                    |                        |
|------------------------------------|------------------------|
| Board length                       | 4.9 inches (12.446 cm) |
| Board Height including Goldfingers | 2.80 inches (7.112 cm) |
| Board Height excluding Goldfingers | 2.475 inches (6.287cm) |

# Appendix A – Troubleshooting

Sealevel Software is supplied with the Sealevel Systems adapter and will be used in the troubleshooting procedures. By using this software and following these simple steps, most common problems can be eliminated without the need to call Technical Support.

1. Identify all I/O adapters currently installed in your system. This includes your on-board serial ports, controller cards, sound cards etc. The I/O addresses used by these adapters, as well as the IRQ (if any) should be identified.
2. Configure your Sealevel Systems adapter so that there is no conflict with currently installed adapters. No two adapters can occupy the same I/O address.
3. Make sure the Sealevel Systems adapter is using a unique IRQ. While the Sealevel Systems adapter does allow the sharing of IRQs, many other adapters (i.e., SCSI adapters & on-board serial ports) do not. The IRQ is typically selected by the BIOS or Operating system. Some BIOS setup software will allow changing the IRQ, but others do not. Another method of changing assigned resources is to try changing PCI slots. This will typically cause the BIOS or OS to reassign the resources.
4. Make sure the Sealevel Systems adapter is securely installed in a motherboard slot.
5. When running DOS or Windows 3.x refer to the supplied Sealevel Software and this User Manual to verify that the Sealevel Systems adapter is configured correctly. This software contains a diagnostic program 'SSD' which will verify if an adapter is configured properly. This diagnostic program is written with the user in mind and is easy to use.
6. For Windows95/98/ME/NT/2000, the diagnostic tool 'WinSSD' is installed in the SeaCOM folder on the Start Menu during the setup process. First find the ports using the Device Manager, then use 'WinSSD' to verify that the ports are functional. Refer to the [WinSSD Software Utility Overview](#).
7. Remember that a loopback test is not possible with the 'NE' switch turned on.
8. Always use the Sealevel Systems diagnostic software when troubleshooting a problem. This will eliminate any software issues from the equation.

If these steps do not solve your problem, please call Sealevel Systems' Technical Support, (864) 843-4343. Our technical support is free and available from 8:00 AM to 5:00 PM Eastern Time Monday through Friday. For email support, contact [support@sealevel.com](mailto:support@sealevel.com).

# Appendix B – How To Get Assistance

Please refer to: Appendix A – Troubleshooting Guide prior to calling Technical Support.

Begin by reading through the Trouble Shooting Guide in **Appendix A**. If assistance is still needed, please see below.

When calling for technical assistance, please have your user manual and current adapter settings. If possible, please have the adapter installed in a computer ready to run diagnostics.

Sealevel Systems provides an FAQ section on its web site. Please refer to this to answer many common questions. This section can be found at <http://www.sealevel.com/faq.asp>.

Sealevel Systems maintains a web page on the Internet. Our home page address is [www.sealevel.com](http://www.sealevel.com). The latest software updates, and newest manuals are available via our web site.

Technical support is available Monday to Friday from 8:00 a.m. to 5:00 p.m. eastern time. Technical support can be reached at (864) 843-4343.

**RETURN AUTHORIZATION MUST BE OBTAINED FROM SEALEVEL SYSTEMS BEFORE RETURNED MERCHANDISE WILL BE ACCEPTED. AUTHORIZATION CAN BE OBTAINED BY CALLING SEALEVEL SYSTEMS AND REQUESTING A RETURN MERCHANDISE AUTHORIZATION (RMA) NUMBER.**

# Appendix C – Electrical Interfaces

## RS-422

The RS-422 specification defines the electrical characteristics of balanced voltage digital interface circuits. RS-422 is a differential interface that defines voltage levels and driver/receiver electrical specifications. On a differential interface, logic levels are defined by the difference in voltage between a pair of outputs or inputs. In contrast, a single ended interface, for example RS-232, defines the logic levels as the difference in voltage between a single signal and a common ground connection. Differential interfaces are typically more immune to noise or voltage spikes that may occur on the communication lines. Differential interfaces also have greater drive capabilities that allow for longer cable lengths. RS-422 is rated up to 10 Megabits per second and can have cabling 4000 feet long. RS-422 also defines driver and receiver electrical characteristics that will allow 1 driver and up to 32 receivers on the line at once. RS-422 signal levels range from 0 to +5 volts. RS-422 does not define a physical connector.


## RS-485

RS-485 is backwardly compatible with RS-422; however, it is optimized for party line or multi-drop applications. The output of the RS-422/485 driver is capable of being **Active** (enabled) or **Tri-State** (disabled). This capability allows multiple ports to be connected in a multi-drop bus and selectively polled. RS-485 allows cable lengths up to 4000 feet and data rates up to 10 Megabits per second. The signal levels for RS-485 are the same as those defined by RS-422. RS-485 has electrical characteristics that allow for 32 drivers and 32 receivers to be connected to one line. This interface is ideal for multi-drop or network environments. RS-485 tri-state driver (not dual-state) will allow the electrical presence of the driver to be removed from the line. Only one driver may be active at a time and the other driver(s) must be tri-stated. RS-485 can be cabled in two ways, two wire and four wire mode. Two wire mode does not allow for full duplex communication and requires that data be transferred in only one direction at a time. For half-duplex operation, the two transmit pins should be connected to the two receive pins (Tx+ to Rx+ and Tx- to Rx-). Four wire mode allows full duplex data transfers. RS-485 does not define a connector pin-out or a set of modem control signals. RS-485 does not define a physical connector.

# Appendix D – Asynchronous Communications

Serial data communications implies that individual bits of a character are transmitted consecutively to a receiver that assembles the bits back into a character. Data rate, error checking, handshaking, and character framing (start/stop bits) are pre-defined and must correspond at both the transmitting and receiving ends.

Asynchronous communications is the standard means of serial data communication for PC compatibles and PS/2 computers. The original PC was equipped with a communication or COM: port that was designed around an 8250 Universal Asynchronous Receiver Transmitter (UART). This device allows asynchronous serial data to be transferred through a simple and straightforward programming interface. A start bit, followed by a pre-defined number of data bits (5, 6, 7, or 8) defines character boundaries for asynchronous communications. The end of the character is defined by the transmission of a pre-defined number of stop bits (usually 1, 1.5 or 2). An extra bit used for error detection is often appended before the stop bits.

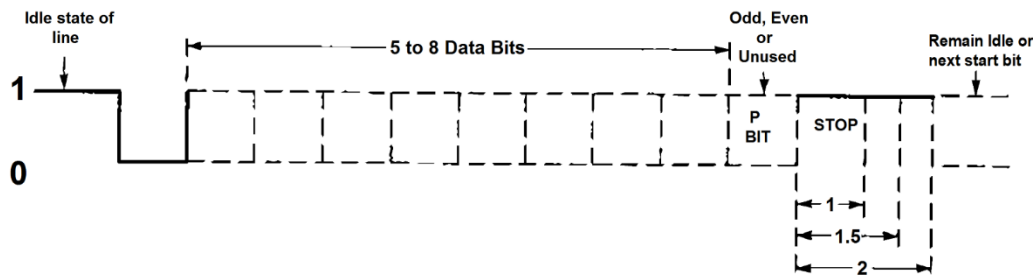


*Asynchronous Communications Bit Diagram*

This special bit is called the parity bit. Parity is a simple method of determining if a data bit has been lost or corrupted during transmission. There are several methods for implementing a parity check to guard against data corruption. Common methods are called (E)ven Parity or (O)dd Parity. Sometimes parity is not used to detect errors on the data stream. This is referred to as (N)o parity. Because each bit in asynchronous communications is sent consecutively, it is easy to generalize asynchronous communications by stating that each character is wrapped (framed) by pre-defined bits to mark the beginning and end of the serial transmission of the character. The data rate and communication parameters for asynchronous communications have to be the same at both the transmitting and receiving ends. The communication parameters are baud rate, parity, number of data bits per character, and stop bits (i.e., 9600, N, 8, 1).



# Appendix E – SILK SCREEN

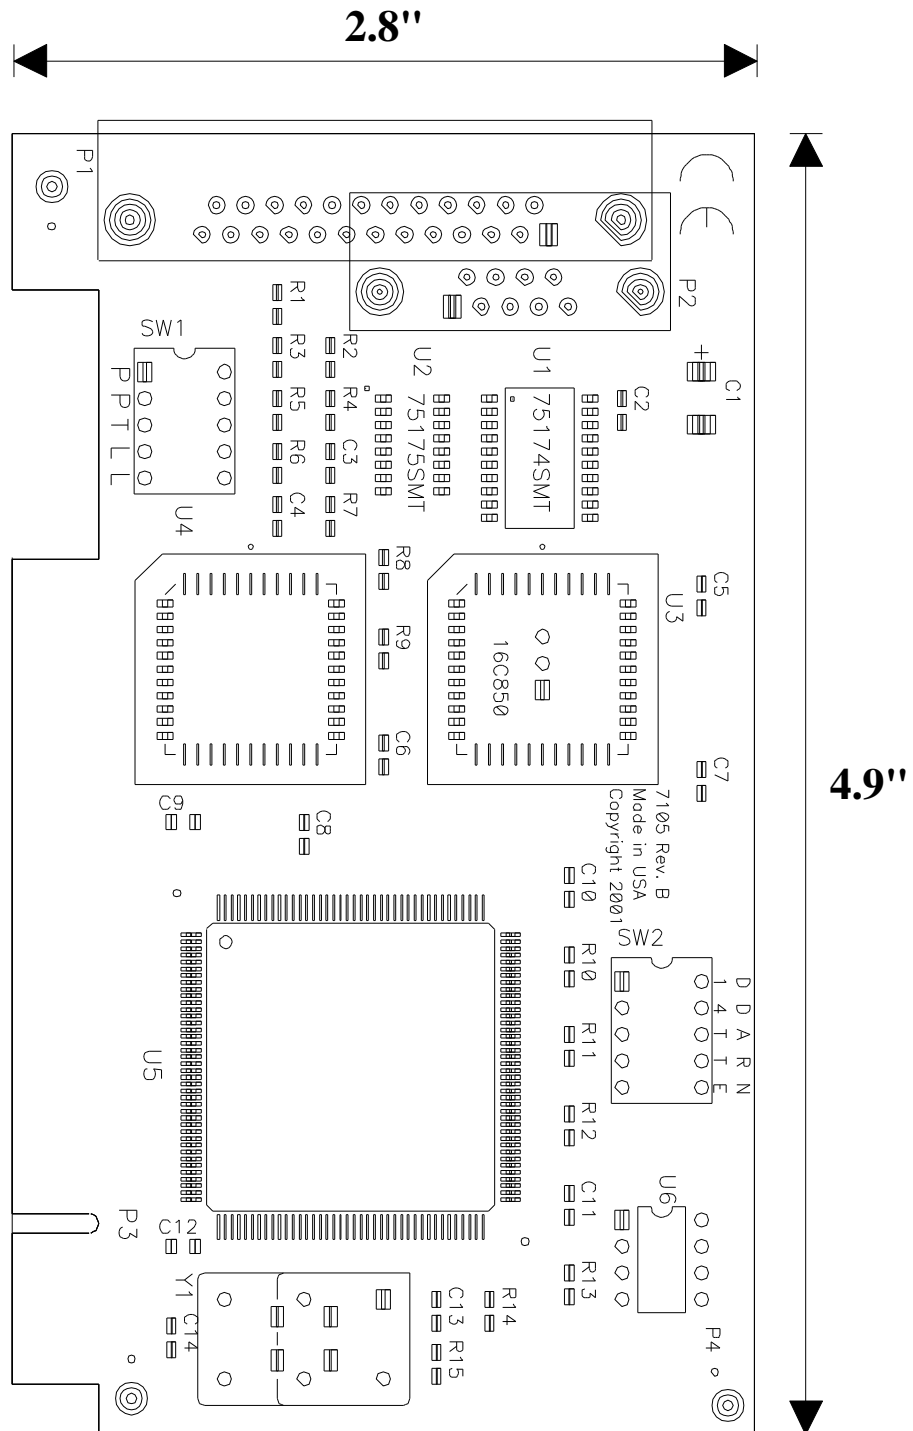

# Appendix F – Compliance Notices

## Federal Communications Commission (FCC) Statement



This equipment has been tested and found to comply with the limits for Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in such case the user will be required to correct the interference at the user's expense.

## EMC Directive Statement



Products bearing the CE Label fulfill the requirements of the EMC directive (89/336/EEC) and of the low-voltage directive (73/23/EEC) issued by the European Commission. To obey these directives, the following European standards must be met:

- **EN55022 Class A** - "Limits and methods of measurement of radio interference characteristics of information technology equipment"
- **EN55024** – "Information technology equipment Immunity characteristics Limits and methods of measurement".



This is a Class A Product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures to prevent or correct the interference.



Always use cabling provided with this product if possible. If no cable is provided or if an alternate cable is required, use high quality shielded cabling to maintain compliance with FCC/EMC directives.

# Warranty

Sealevel's commitment to providing the best I/O solutions is reflected in the Lifetime Warranty that is standard on all Sealevel manufactured I/O products. We are able to offer this warranty due to our control of manufacturing quality and the historically high reliability of our products in the field. Sealevel products are designed and manufactured at its Liberty, South Carolina facility, allowing direct control over product development, production, burn-in and testing. Sealevel achieved ISO-9001:2015 certification in 2018.

## Warranty Policy

Sealevel Systems, Inc. (hereafter "Sealevel") warrants that the Product shall conform to and perform in accordance with published technical specifications and shall be free of defects in materials and workmanship for the warranty period. In the event of failure, Sealevel will repair or replace the product at Sealevel's sole discretion. Failures resulting from misapplication or misuse of the Product, failure to adhere to any specifications or instructions, or failure resulting from neglect, abuse, accidents, or acts of nature are not covered under this warranty.

Warranty service may be obtained by delivering the Product to Sealevel and providing proof of purchase. Customer agrees to ensure the Product or assume the risk of loss or damage in transit, to prepay shipping charges to Sealevel, and to use the original shipping container or equivalent. Warranty is valid only for original purchaser and is not transferable.

This warranty applies to Sealevel manufactured Product. Product purchased through Sealevel but manufactured by a third party will retain the original manufacturer's warranty.

## Non-Warranty Repair/Retest

Products returned due to damage or misuse and Products retested with no problem found are subject to repair/retest charges. A purchase order or credit card number and authorization must be provided in order to obtain an RMA (Return Merchandise Authorization) number prior to returning Product.

## How to obtain an RMA (Return Merchandise Authorization)

If you need to return a product for warranty or non-warranty repair, you must first obtain an RMA number. Please contact Sealevel Systems, Inc. Technical Support for assistance:

|           |  |
|-----------|--|
| Available | Monday – Friday, 8:00AM to 5:00PM EST                          |
| Phone     | 864-843-4343   |
| Email     | <a href="mailto:support@sealevel.com">support@sealevel.com</a> |

## Trademarks

Sealevel Systems, Incorporated acknowledges that all trademarks referenced in this manual are the service mark, trademark, or registered trademark of the respective company.